


TTN Titen Concrete and Masonry Screw


Installation

1

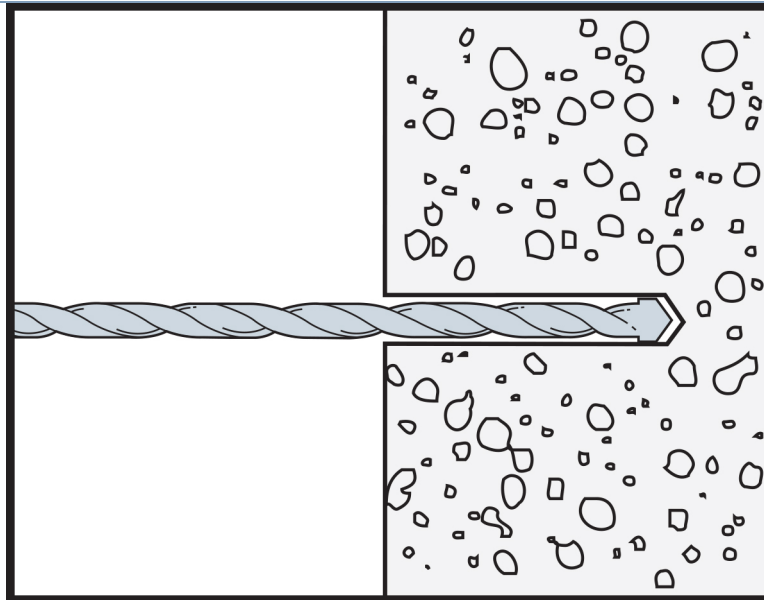


Drill

2

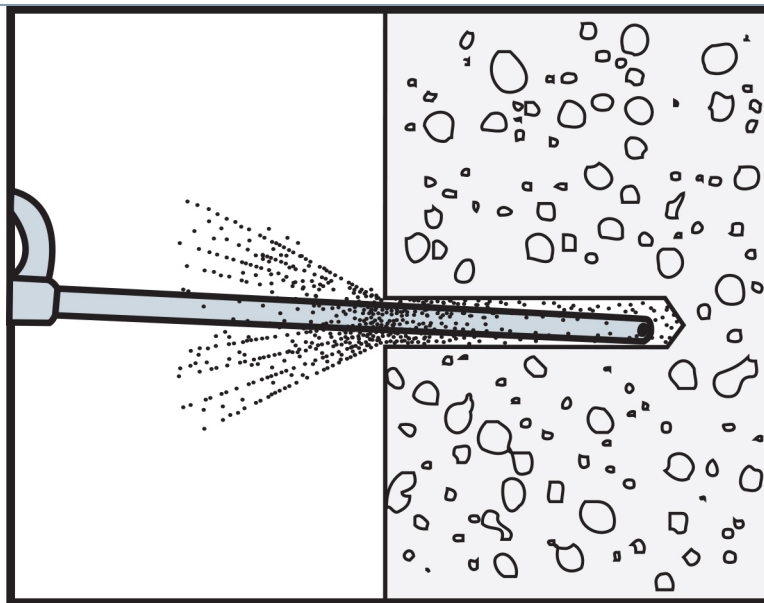


Blow

3

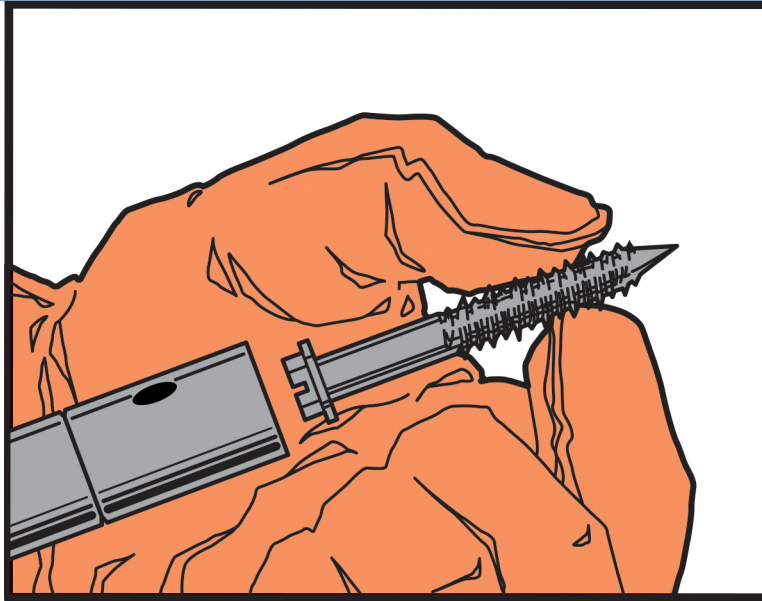

Use recommended driver bit

4

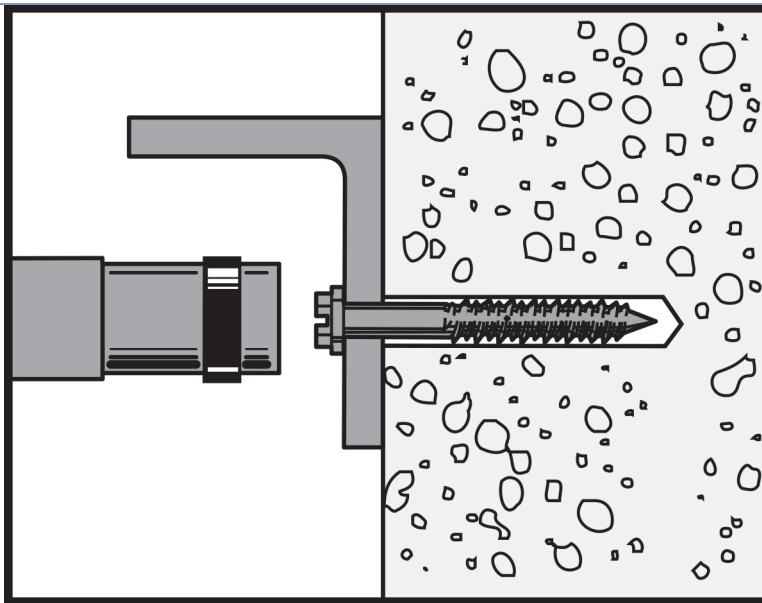

Install